



# Clearing SBC Data On A Trident

Aqueous Technologies - 9055 Rancho Park Ct., Rancho Cucamonga CA 91730


Before Clearing the SBD data, it is wise to export the data for future records.

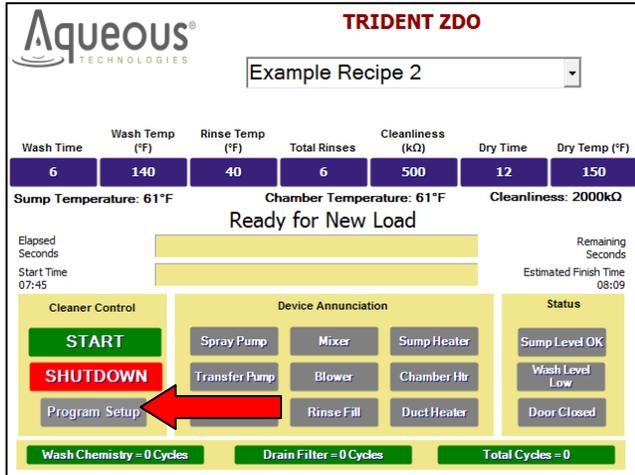

Select "Program Setup"

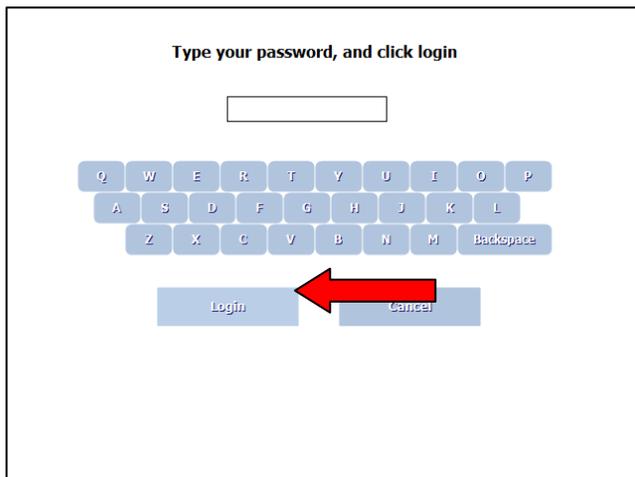


Enter your Administrator password (the factory password is "ADMIN") then select "Login"

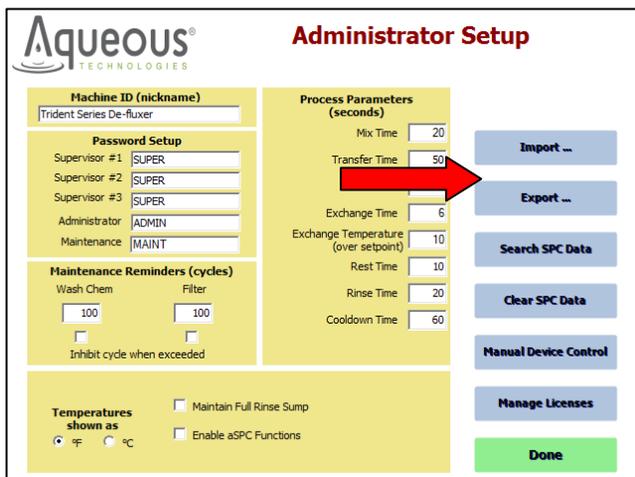


Select "Export"



Insert a USB thumb drive into an available port and select "Export to Disk". Select the correct path to select your USB drive and save the data. It is wise to remove the USB thumb drive and insert in another office computer to verify that the data was properly saved.

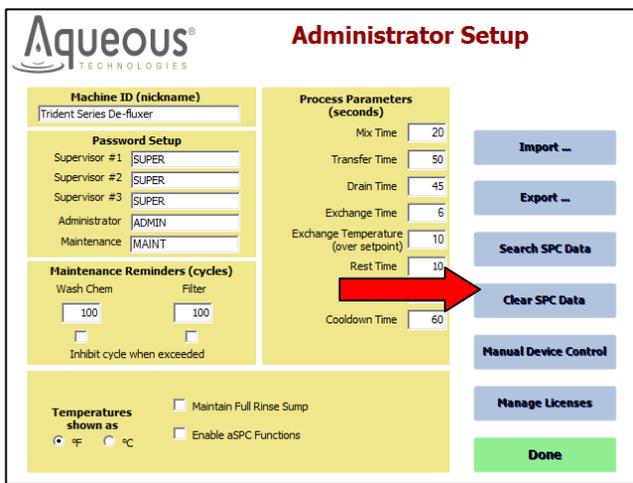

Select "Clear eSPC Data"

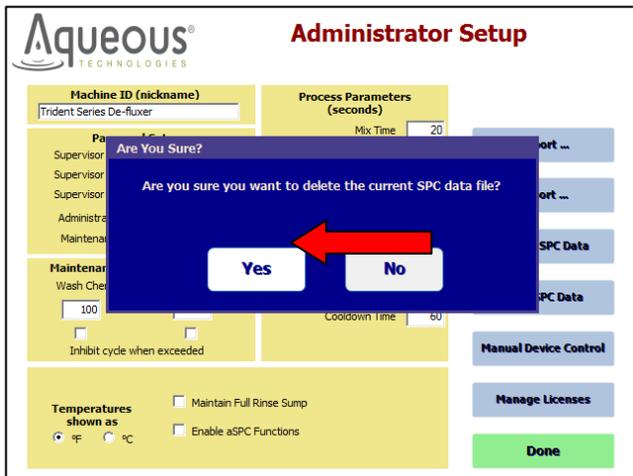

Select "Yes" to agree to clear this data.

**Aqueous**  
TECHNOLOGIES

### Administrator Setup

**Machine ID (nickname)**  
Trident Series De-fluxer

**Password Setup**  
Supervisor #1: SUPER  
Supervisor #2: SUPER  
Supervisor #3: SUPER  
Administrator: ADMIN  
Maintenance: MAINT

**Maintenance Reminders (cycles)**  
Wash Chem: 100  
Filter: 100  
 Inhibit cycle when exceeded

**Process Parameters (seconds)**  
Mix Time: 20  
Transfer Time: 50  
Drain Time: 45  
Exchange Time: 6  
Exchange Temperature (over setpoint): 10  
Rest Time: 10  
Rinse Time: 20  
Cooldown Time: 60

**Temperatures shown as**  
 °F  °C  
 Maintain Full Rinse Sump  
 Enable aSPC Functions

**Buttons:** Import ..., Export ..., Search SPC Data, Clear SPC Data, Manual Device Control, Manage Licenses, Done

Select "Done" to return to the main screen.

At this point there will be no previous cycles stored on this computer and the SBC log will be empty. The equipment is now ready to be put into operation.

**If you have any questions, please contact the Aqueous Technologies Service Department  
(909) 291-1130 or [service@aqueoustech.com](mailto:service@aqueoustech.com)**